
## Output Ins

### Installation dimension


## **Output connections**

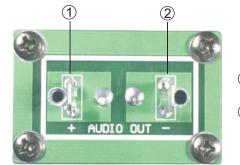

① OUTPUT POSITIVE ② OUTPUT NEGATIVE

Contents		Warning						
Important	note	Specificatio						
Input and	output							
Output	Installat	tion dimensior						

Warning

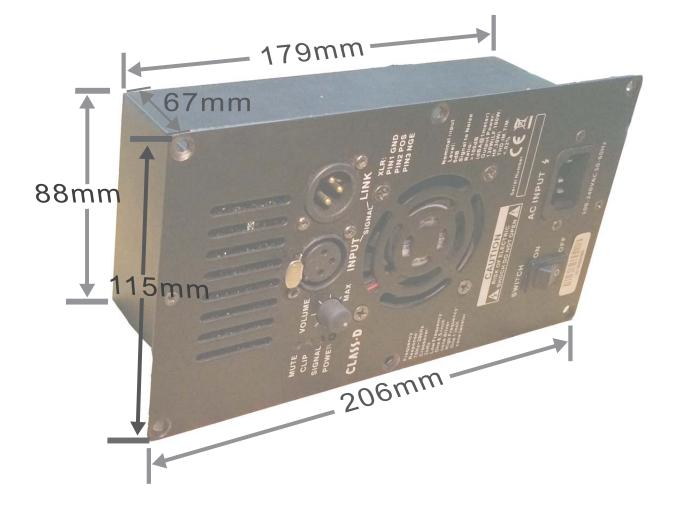

# INSTALLATION DIMENSION


4

# WARNING NOTICES

#### SAFEGUARDS

Contents

Electrical energy can perform many useful funtions, This unit has been engineered and manufactured to assure your personal safety. Imporoper use can result in potential electrical shock or fire hazards. In order not to defeat the safeguards, observe the following precautions for its installation, use and servicing.

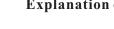

CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE

•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		
or	าร										•			•					•	•				2
		•	•				•									•	•				•			3
n		•																					4	Ļ

**Explanation of Graphical Symbols** 



CAUTION RISK OF ELECTRIC SHOCK: OPEN ONLY IF QUALIFIED AS SERVICE PERSONNEL

#### Important Note

#### **Specifications**

#### IMPORTANT NOTE

ATTENTION: This unit must be protected from damp because of the risk of fire and the possibility of electric shocks.

1. Make sure that you have the correct mains voltage. Only operate the unit at the mains voltage marked on the rear panel.

2. Make sure that nothing especially no metal objects are inserted into the device. This could result in electric shock or malfunction.

3. If the unit is subjected to extreme fluctuations of temperature e.g. On being transported from outside into a heated room, condensation can form. This unit should not be used untill it has reached room temperature.

4. In the event of water or any other fluid being accidentally spilt on the unit switch the unit off immediately and send it to a qualified service workshop for inspection.

5. Make sure that the unit is always well ventilated and never exposed to direct sunlight

6. Do not use sprays to clean the unit as they have a detrimental effect on the unit and could ignite suddenly.


7. The machine use single power switch, please cut off the power before fix.

8. Please do not put the cup, vessel of flower or container above the machine, in case the leak out water then cause the leakage current off the machine.

### **CLASS-D AMPLIFIER MODULE**

SPECIFICATIONS									
ITEM	D1-150W								
8Ω Power	1×150W								
4Ω Power	1×200W								
Frequency Response	20Hz-20KHz ±1dB								
THD+N 1KHz 1W 8Ω	<0.1%								
Signal to Noise Ratio 1KHz	>80dB								
Class	D								
Protection	Short, DCP, OVP, UVP, OCP, OTP								
Operating Voltage	90V-265V								
Input Sensitivity	1V								
Input Impedance	20ΚΩ								
Fuction	VOLUME								
Dimensions(W×H×D)	206×115×67mm								
Packing Dimension	230×140×100mm								
Net Weight(kg)	0.9								
Gross Weight(kg)	1.6								

2

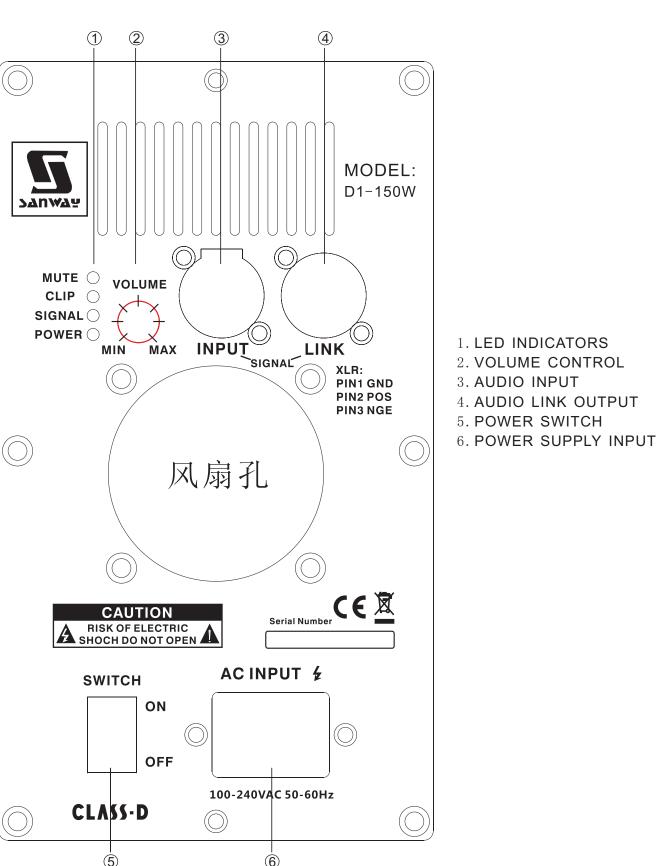

3

Input and output

