

Powder-out Machine Instruction (HAN-128)


1.Key description

OFF/ON: Power switch

CHECK: Manual test

SWITCH: Start switch

2.Installation method

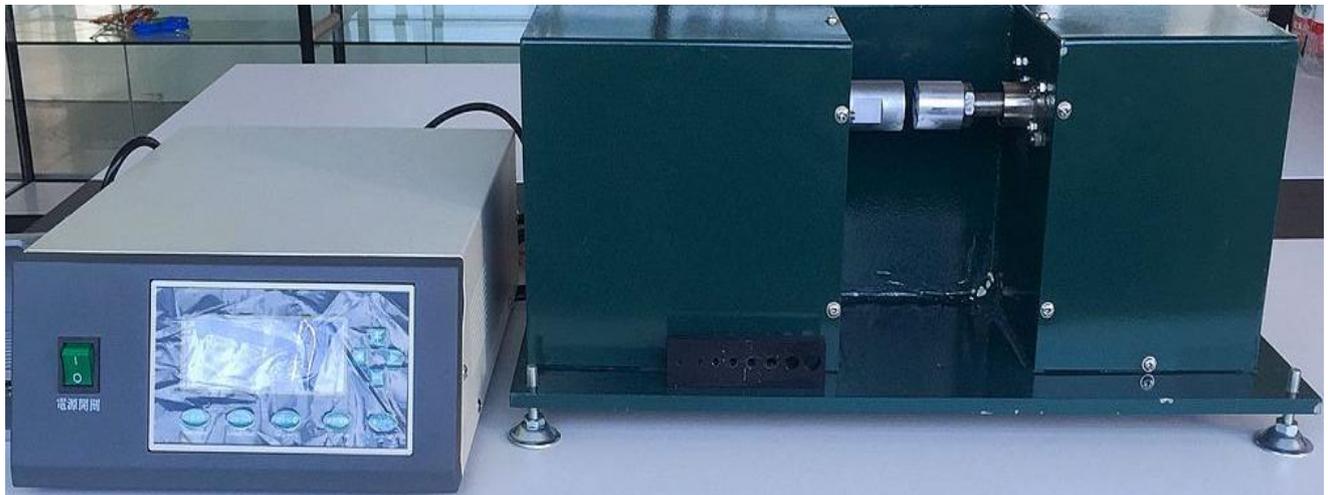


Connect the power 220V, connect the signal line plug between the power supply and the main engine.

3.Usage method

(1) Switch on the power and press the ON key.



(2) Pull the handle of the shaking head, put the product into the vibrating mold, and release the handle.

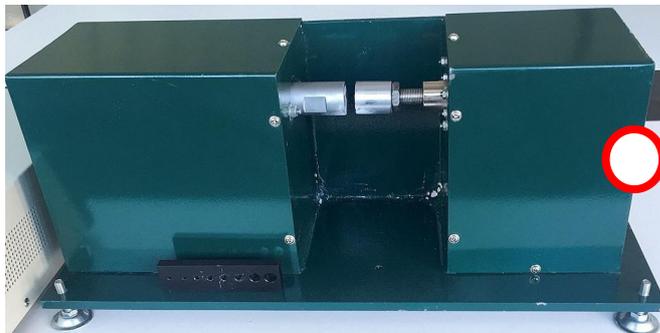

(3) Start switch. Time depends on the diameter of different products.

(4) Stop the start switch, complete the stripping metal shell, pull the handle and remove the product.。

(5) Use finished, press OFF key.

4.Product diameter mold adjustment

Rotate the vibrating head to adjust to the appropriate slot.

5.Vibration frequency adjustment

Open the adjusted protective cover and select the appropriate frequency gear.